

# NEPTUNE Cheat Sheet



SMS Codes “pass” is password. Default: 4321

Request Gprs Base Sms Base and SMSC numbers	#4321I
Request Cell 1 Cell2 Cell3 Cell 4 cell 5 cell 6	#4321J
Request Passwords Units Own number	#4321K
Request GPRS settings	#4321M
Request Gprs Attach Status	#4321G?
Set Gprs as main method of comms with SMS fallback	#4321G1
Set SMS as the only Method of Comms Default xxxxx	#4321G0
Request Health Rep time / Batt volts	#4321E
Request The status of Inputs 1 thru 4	#4321a
Request The Status of inputs 5 and 6	#4321b
Request Status of the Outputs	#4321R
Report Timer Values of Outputs 1 and 2	#4321*
Request Signal strength	#4321T
Request Product Id and Software Version	#4321v
Output 1 Closed	#4321A1
Output 1 Open	#4321A0
Output 1 Pulsed	#4321A9

Program drop-call numbers into unit

Add single number

SMS this code to the unit:

#passaddnum"+27xxx"

Where pass is password and xxx is number

Add multiple numbers

SMS up to 6 numbers at a time with the code:

#passaddnum"+27xxx;+27xxx;+27xxx"

Where pass is password and xxx is number

+27 takes place of first 0 in number

## SMS Codes “pass” is password. Default: 4321

<b>Output 2 Closed</b>	<b>#4321B1</b>
<b>Output 2 Open</b>	<b>#4321B0</b>
<b>Output 2 Pulsed</b>	<b>#4321B9</b>
<b>Airtime Request</b>	<b>#4321Z</b>
<b>Erase All Dropped Caller Numbers</b>	<b>On request</b>
<b>Request Date and Time</b>	<b>#4321t</b>
<b>Start to store drop calls</b>	<b>#4321D1</b>
<b>Stop Drop call Storage default xxxxx</b>	<b>#4321D0</b>
<b>Inputs ON default xxxxxx</b>	<b>#4321O</b>
<b>Inputs OFF</b>	<b>#4321P</b>
<b>Log On xxxxx</b>	<b>#4321L1</b>
<b>Log Off Default xxxxxx</b>	<b>#4321L0</b>
<b>Get Lat and Long xxxxxx as per format for internet only works when GPRS is Used.</b>	<b>#4321F</b>

### Record drop-call numbers into unit

Start recording:

Send the following code to unit:

#passD1

Record numbers:

All numbers calling the unit will now trigger output 1 and be saved on the unit

Stop recording:

Send the following code to unit:

#passD0 (Zero, not letter O)

INPUTS: 0V-12V rated inputs

RELAYS: 1A/12VDC or 0.5A/220VAC

POWER: 12V supply or gel battery

